

WFPV


FREEZE PROTECTION VALVE INSTALLATION INSTRUCTIONS

INSTRUCTION PART NO. 2367100

REVISION 0

TYPICAL APPLICATIONS

The WFPV is used for freeze protection on pipes, valves, fittings, pumps, condensate systems, safety showers, fire lines, spray nozzles, freeze sensitive equipment or as backup protection on steam tracing lines.

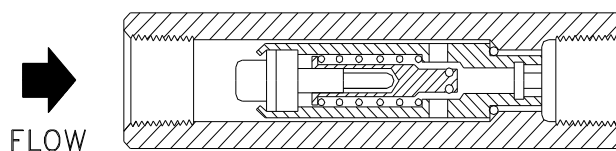


WFPV FREEZE
PROTECTION VALVE

HOW IT WORKS

A thermostatic element senses water temperature in the valve. If the temperature falls below 40°F, the valve will remain open as long as the water flowing by the sensing element is less than 40°F. When the water temperature rises above 40°F, the valve will close.

MAX. OPERATING CONDITIONS

PMA	200 PSIG
TMA	250°F

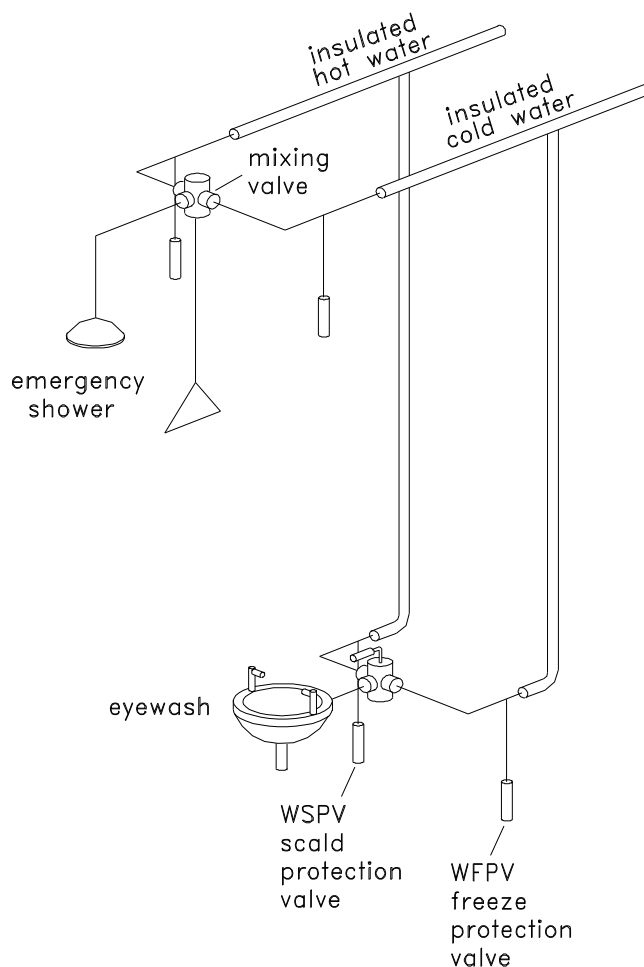

EMERGENCY SHOWER & EYEWASH

Each Watson McDaniel Company Product is warranted against defects in material and workmanship for one year from date of shipment. This warranty extends to the first retail purchaser only. All defective material must be returned to the person from whom you purchased the Product, transportation prepaid, free of any liens or encumbrances, and if found to be defective will be repaired free of charge or replaced, at the warrantor's or seller's option. If the material is replaced, any replacement will be invoiced in the usual manner and after inspection of alleged defective material an adjustment will be made for depreciation caused by purchaser's use. In no event will Watson McDaniel Company be liable to do more than refund the original contract price. Incidental and consequential damages are excluded, whether under this warranty or otherwise. All implied warranties, including warranties of merchantability and fitness for a particular purpose, are disclaimed and excluded.